

OWNER'S INSTRUCTIONS

LED-Projecteur 30W

LED FloodLight 30W

Model NO.:



Caution: Read all instructions and warning before Operating



Warning: To avoid serious injury or death from electrical shock or fire

1. The lamp **MUST BE USED** in dry condition
2. **Always** disconnect the power before servicing or inspecting the lamp for any reason
3. The lamp is suitable for indoor & outdoor use
4. This light is intended for use as general lighting, **DO NOT** charge the light in the presence of flammable or explosive gases
5. **NEVER LOOK DIRECTLY INTO LIGHT SOURCE.** LED are extremely bright and can damage eyes with prolonged exposure
6. **KEEP AWAY** from excessive heat or flame
7. **DO NOT** dispose of dead battery packs in fire or by burning, Lithium batteries may be disposed of in standard municipal waste system
8. **DO NOT** attempt to open or repair battery pack
9. **KEEP OUT OF REACH OF CHILDREN**

ELECTRICAL SPECIFICATION

Lithium Battery	Output	8000mAh, 3.7V
Brightness	Low	1500 Lumens
	High	2900 Lumens
LED		30W COB

CHARGING INSTRUCTIONS

IMPORTANT: Charge fully before first use to maximize battery life and run time

CAUTION: Do not cover the unit while it is charging



1, The Unit is provided with a type C USB cord & 5V2A Charger for charging, the cord end can be connected to any 5V USB Port for charging

2, Open the soft cover on the back of the light to expose the Type C hole, then connect the Type-C plug on the end of cord to start the charging process

3, When charging, the indicator will blink, and charging full, all 4 indicator will show green, the charging cycle may take up to 4.5-5hours depending on the battery capacity before charging and charger's input current

USING THE LIGHT AS POWER BANK TO CHARGE YOUR DEVICES

The light has a USB power outlet that can be used charge other Devices

- 1) connect the cable with USB output port
- 2) Connect the other end of the cable to cellphone, tablet or other USB Rechargeable device, max 5V2A

OPERATION

Push the switch located on backside of lamp, push once for low brightness, again for High brightness, pressing switch a third will turn the light off.



The light angle is 360° fully adjustable, it can also be mounted by stand hanger

MAINTENANCE

WARNING : UNPLUG UNIT BEFORE PERFORMING ANY MAINTENANCE

Remove dirt and grime as soon as it accumulates, Use a soft, damp cloth and a soap, if needed, Never submerge any part of lamp in any solution to clean it **DO NOT USE** solvents such as gasoline, turpentine etc to clean unit

The light source of this luminaire is not replaceable, when the light source reaches its end of life, the whole luminaire shall be replaced

ENVIROMENTAL PROTECTION



Waste electrical products should not be disposed of with household waste, Please recycle where facility exist, check with local authority for recycling advice



Steinermann AG
Wilerstrasse 2180
CH-9230 Flawil / SG
www.steinermann.ag

Manuals in



www.steinermann.ag